
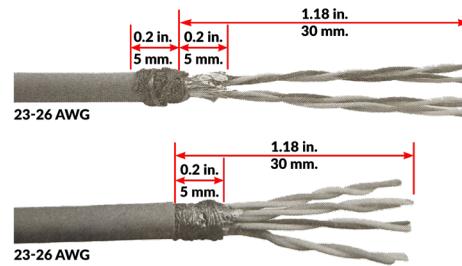


1



Remove the stopper before installation.

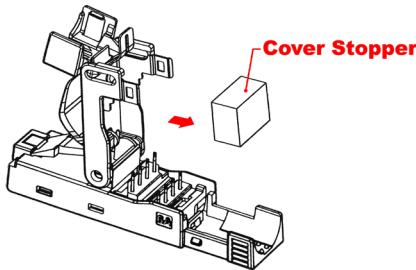

PIN	TIA/EIA T568A		TIA/EIA T568B		INDUSTRIAL
	White Green	Green	White Orange	Orange	Yellow Orange
1					
2	Green		Orange	Orange	
3	White Orange	Orange	White Green	Green	White Blue
4	Orange				
5	Blue		Blue		
6	White Blue	Blue	White Blue		
7	White Brown	Brown	White Brown	Brown	
8	Brown				


2

Strip off cable jacket as shown, fold back the drain wire/braiding. Fan out all four twisted pairs, cut the conductors as shown.

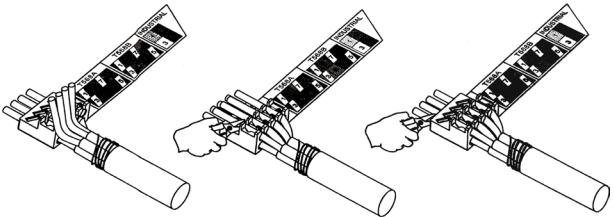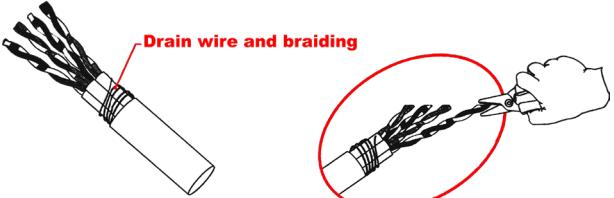



3

Follow the color coding label and allocate each conductor into proper slot on wiring cap. Trim the ends of excess conductors.

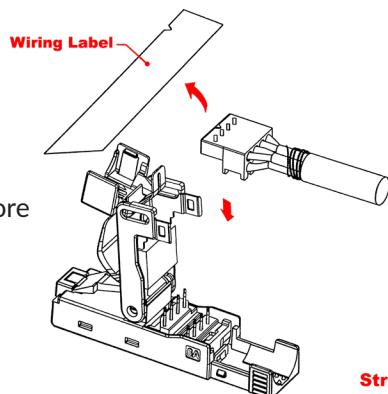

5


Place the wiring cap onto plug, use pliers to clamp wiring cap until it completely snap-in to effect the connection.

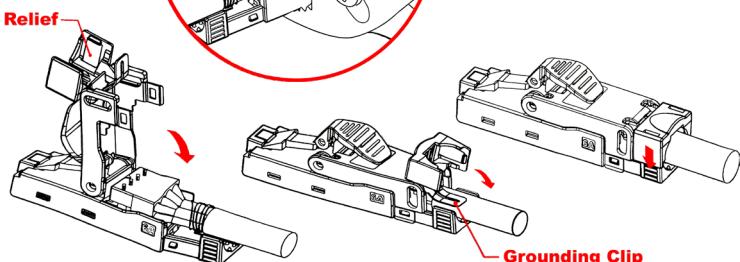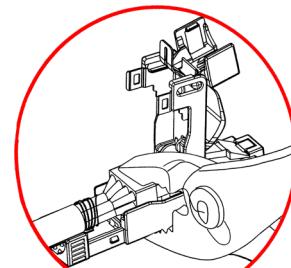

6

Close plug cover, make sure the drain wire is in proper contact with grounding clip on plug. Press Strain Relief firmly.

Unload the Cable

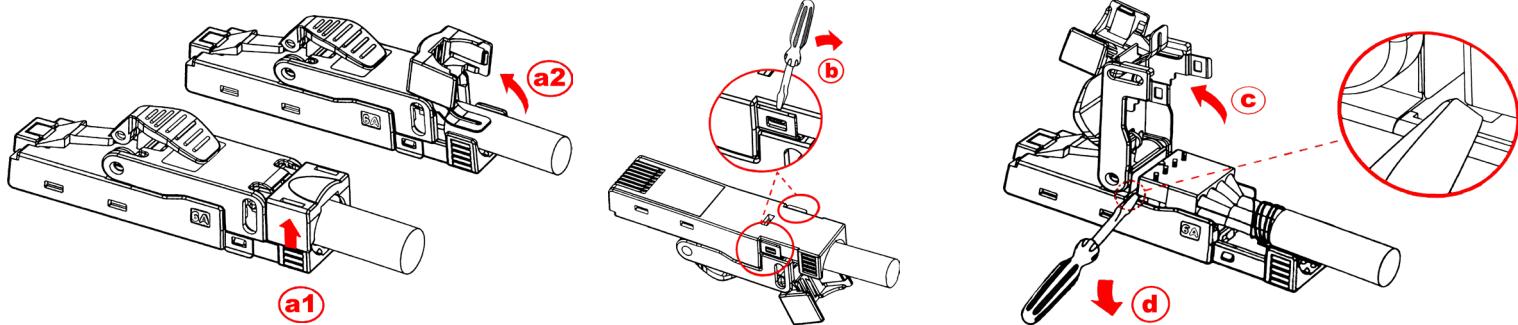

a) Open Strain Relief

b) Use screwdriver to loose the plug cover

c) Open Plug Cover

d) Release Wiring Cap

Florida (HQ)
800-749-2447

California
951-696-7772

New York
845-391-8318

Texas
713-322-7242

verticalcable.com

This specification sheet is subject to change without notice.

Rev. 01/2026