


45 RMU OPEN RACK

4 Post Rack Assembly

3 Install the outer space bars on each side of the rack and then add the center space bar to the desired depth.

* Attach upper space bars with 1 bolt

* Attach lower spacer bars with 2 bolts

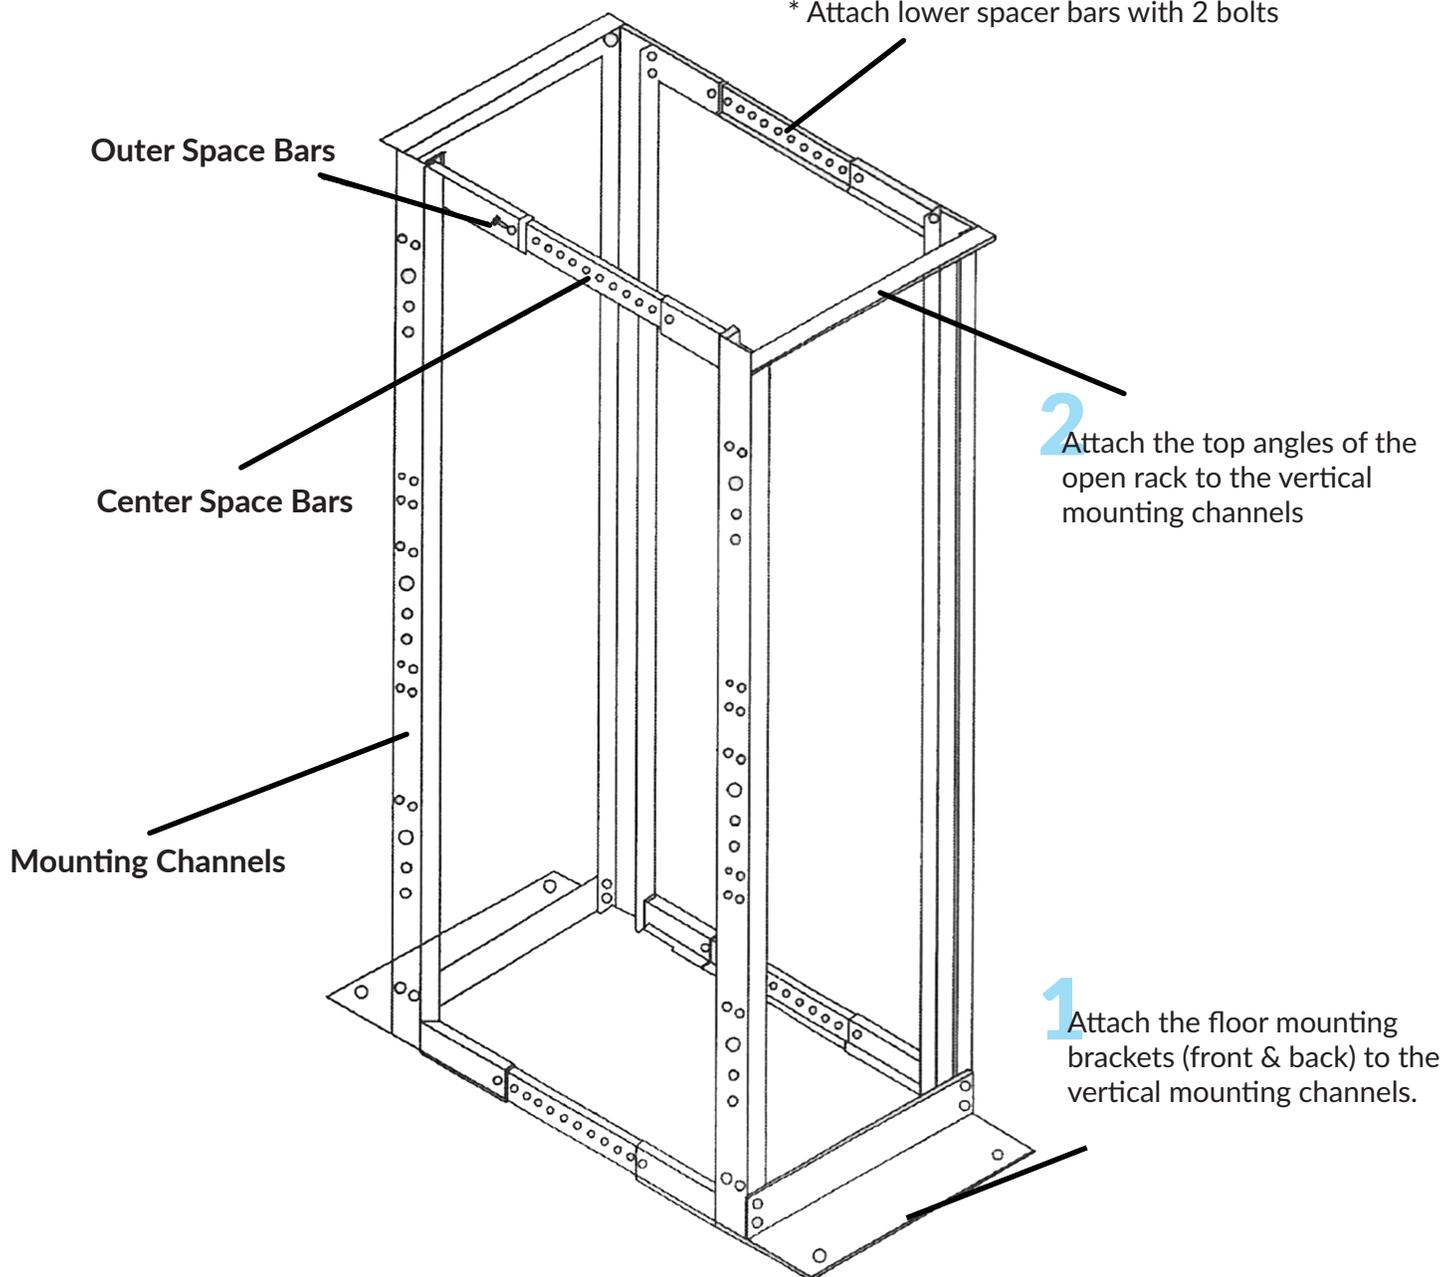

Florida (HQ)
800-749-2447

California
951-696-7772

New York
845-391-8318

Texas
713-322-7242

verticalcable.com

This specification sheet is subject to change without notice.

VC
VERTICAL CABLE

Rev. 02/2026