



INSTALLATION INSTRUCTIONS

for ARRAY SPLICE CASSETTES
265-CAS10 SERIES

MOUNTING IN CONNECTING HARDWARE

Affix base ① using two sets of screws and nuts ② provided with cassette to connecting hardware with desired orientation.

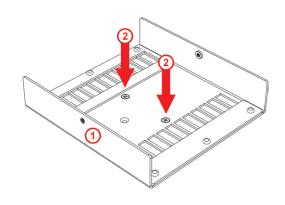

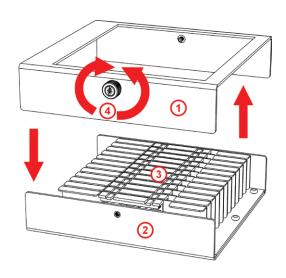

COVER PLACEMENT/REMOVAL

Cover placement:

put cover ① over base ②, adjust cartridge top flanges ③ in cover's rectangular opening, and tighten two captive screws ④. Cover removal:

loosen two captive screws (4) and remove cover (1).

CARTRIDGE INSERTION/REMOVAL

Cartridge insertion:

insert cartridge "legs" (1) in corresponding slots in base's bottom grid (2) and slide cartridge forward until locked in place (3). Cartridge removal:

push cartridge out of its slot and pull out.

